

XtraBrom 111 biocide is a free-flowing, granular, bromine-based product used for biocontrol of industrial water systems. The active ingredient is 1,3-dibromo-5,5-dimethylhydantoin (DBDMH), providing approximately 111% available bromine.

XtraBrom 111 biocide is effective at controlling biofilm, the thin layers of bacteria and slime attached to cooling system surfaces, which can diminish cooling system performance. Biofilms can reduce heat transfer efficiency and contribute to underdeposit corrosion. A laboratory study, conducted by the Biofilm Research Group at the University of Calgary, indicates that it takes significantly less XtraBrom 111 biocide than most conventional oxidizing and non-oxidizing biocides to control biofilm. The study also suggests that the effectiveness of the biocides depends on the age of the biofilm. All the oxidizing biocides tested were effective at eradicating the one-day-old biofilm at halogen residuals of 1 - 4 ppm as Cl₂. However, as Figure 1 shows, it takes less XtraBrom 111 biocide than BCDMH and activated sodium bromide and considerably less than bleach and trichlor to eradicate the 7-day-old biofilm.


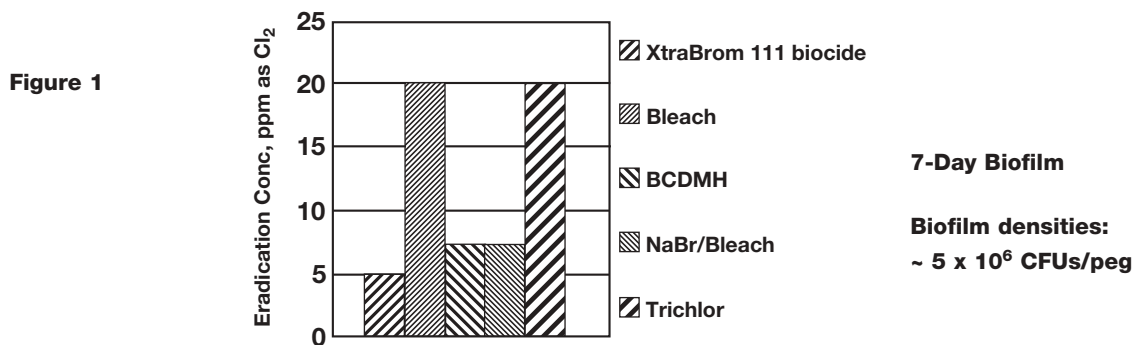


Figure 2 reports the effectiveness of XtraBrom 111 biocide versus the common non-oxidizing biocides. Data indicate that it takes less XtraBrom 111 biocide or DBNPA than the others to control a 1-day-old biofilm.

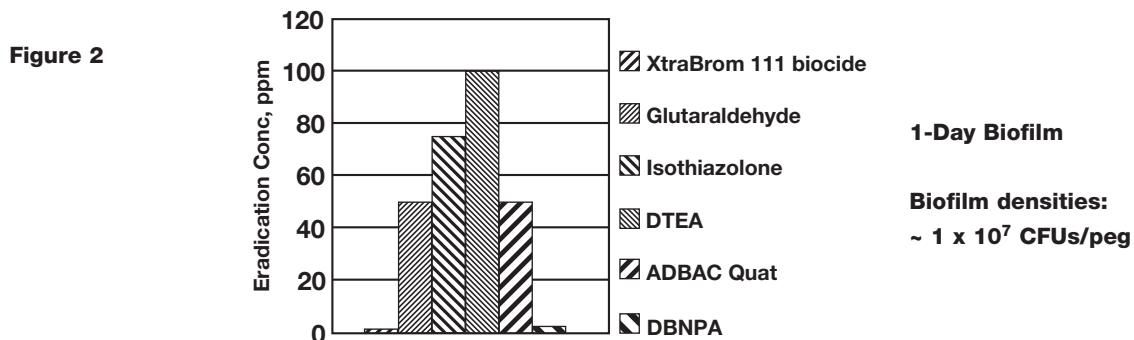

*The concentrations of the non-oxidizers are as active ingredient (AI).
XtraBrom 111 biocide ppm is as Cl₂.*

Biofilm can lead to reduced system service life and increased system operating costs. It compromises system performance by decreasing heat exchanger efficiency, increasing metal corrosion and pitting, and contributing to the fouling of high-efficiency cooling tower film fills. This work shows that, when properly applied, XtraBrom 111 biocide can be part of an overall water treatment program that incorporates effective microbiological control, scale and corrosion inhibition strategies, and regular maintenance practices.

The biofilm studies were performed by the Biofilm Research Group at the University of Calgary, Calgary, Alberta, Canada, using the Calgary Biofilm Device (CBD).

(continued from preceding page)

System Description

The Calgary Biofilm Device (CBD) allows the growth of 96 identical biofilms under carefully controlled conditions. The CBD is a two-part vessel comprised of an upper plate containing 96 pegs that seals against a bottom plate. The bottom plate can consist of either a trough (for biofilm growth) or a standard 96-well plate (for biocide challenge). The technique consists of growing identical biofilms on the pegs using a rocker table to generate the required shear force and then challenging the biofilms with selected antibiotics or biocides for one hour. After the challenge, the biofilms are placed into individual wells of growth media and ultra-sonicated to remove any surviving organisms. Following overnight culture, the wells are checked for turbidity. Clear, transparent wells indicate complete deactivation of biofilm bacteria. Conversely, turbidity ("growth") indicates incomplete deactivation. The minimum biofilm eradication concentration (MBEC) is defined as the minimum concentration of biocide that results in complete biofilm deactivation. All of the biocide challenge work was performed with synthetic water containing 200 ppm calcium hardness (as CaCO₃), 150 ppm alkalinity (as CaCO₃), 150 ppm chloride at pH 8.0 (±0.1). The results reported represent the average of at least two determinations.

Glossary:

BCDMH:	bromochlorodimethylhydantoin
Trichlor:	trichloroisocyanuric acid, trichloro-s-triazinetrione
DTEA:	decylthioethaneamine hydrochloride
ADBAC quat:	alkyldimethylbenzyl ammonium chloride
DBNPA:	dibromonitripropionamide

For further information on this study, please refer to papers presented by Dr. C.J. Nalepa of Albemarle Corporation at CTI 2002 (paper TP02-13) and Corrosion 2003 (paper 03716) conference by NACE International.

For further information on this product, please refer to the technical data sheet, material safety data sheet and startup guide, which are available on request.

The information presented herein is believed to be accurate and reliable, but is presented without guarantee or responsibility on the part of Albemarle Corporation. It is the responsibility of the user to comply with all applicable laws and regulations and to provide for a safe workplace. The user should consider any health or safety hazards or information contained herein only as a guide, and should take those precautions which are necessary or prudent to instruct employees and to develop work practice procedures in order to promote a safe work environment. Further, nothing contained herein shall be taken as an inducement or recommendation to manufacture or use any of the herein materials or processes in violation of existing or future patents.



AMERICAS 451 Florida Street • Baton Rouge, Louisiana 70801-1765 • Tel: 225-388-7402 or 800-535-3030 • Fax: 225-388-7848 **EUROPE** Parc Scientifique Einstein • Rue du Bosquet 9 • B-1348 Louvain-la-Neuve Sud, Belgium • Tel: 32-10-48-1711 • Fax: 32-10-48-1717 **ASIA PACIFIC** 111 Somerset Road #13-03 • Singapore 238164 • Tel: 65-6732-6286 • Fax: 65-6737-4155
ASIA PACIFIC 16th Floor, Fukoku Seimei Building • 2-2, Uchisaiwaicho, 2-Chome • Chiyoda-ku, Tokyo 100, Japan • Tel: 81-3-5251-0796 • Fax: 81-3-3500-5623 **ASIA PACIFIC** China World Tower, Room 1317 • No. 1 Jian Guo Men Wai Avenue • Beijing 100004 China • Tel: 86-10-6505-4153 or 86-10-6505-4154 • Fax: 86-10-6505-4150